



## NOPM-XP

The NOPM-XP includes 10 power and 10 sense spare contacts for 5 NO2MW-XP Chassis assemblies.