




ASSEMBLY INSTRUCTION

neutriCON | Cable Connector

Standard & Crimp Version SR8 A/B

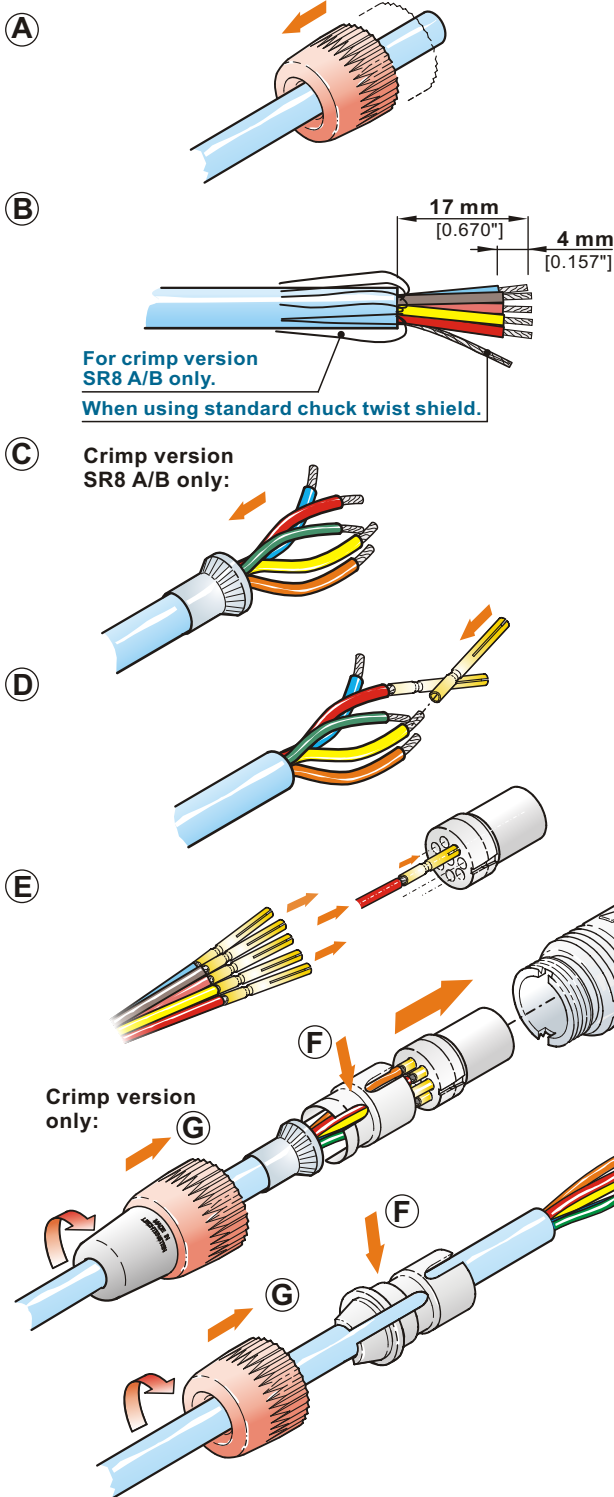

- A** Put the bushing onto the cable.
- B** Prepare cable as shown.
- C** Crimp version SR8 A/B only:
Fold back the shield.
Slide crimp ferrule onto the cable.
- Use our HX-R-BNC crimp tool with the appropriate die (see ordering info) to crimp the ferrule.
- D** Wire contacts:
• Solder standard contacts.
• For crimp contacts (BC 1, PC 1) use our HX-CONTACT crimp tool with the appropriate positioner (see ordering info).
- E** Snap contacts into insert.
- Contact Arrangement:
Male
Female
- F** Press chuck onto cable.
- G** Slide insert and chuck into the housing and fasten the bushing.

Same procedure for MC & SC housing with female or male inserts!

NEUTRIK AG	LI	T: +423/237 24 24	F: +423/232 53 93	NEUTRIK France	FR	T: +33 1/4131 6750	F: +33 1/4131 0511
NEUTRIK USA Inc.	USA	T: +1 704 / 972 3050	F: +1 704/438 9202	NEUTRIK Tokyo Ltd.	JP	T: +81 3/3663 4733	F: +81 3/3663 4796
NEUTRIK (UK) Ltd.	UK	T: +44 1983 / 811 441	F: +44 1983/811 439	NEUTRIK Hong Kong Ltd.	HK	T: +852/2687 6055	F: +852/2687 6052
NEUTRIK Vertriebs GmbH	DE/NL/AT/DK	T: +49 8131 / 280 890	F: +49 8131/280 830	NEUTRIK India Pvt. Ltd.	IND	T: +91/982 05 43 424	F: +91/22 26163 540

Draft. Nr.: BDA 124 / 3102M1221 | Update: 04.12.2013 | Data subject to change without prior notice. ©2013 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.