




# ASSEMBLY INSTRUCTION

## NEUTRIK tinyPLUG | 3.5 mm right-angle stereo plug

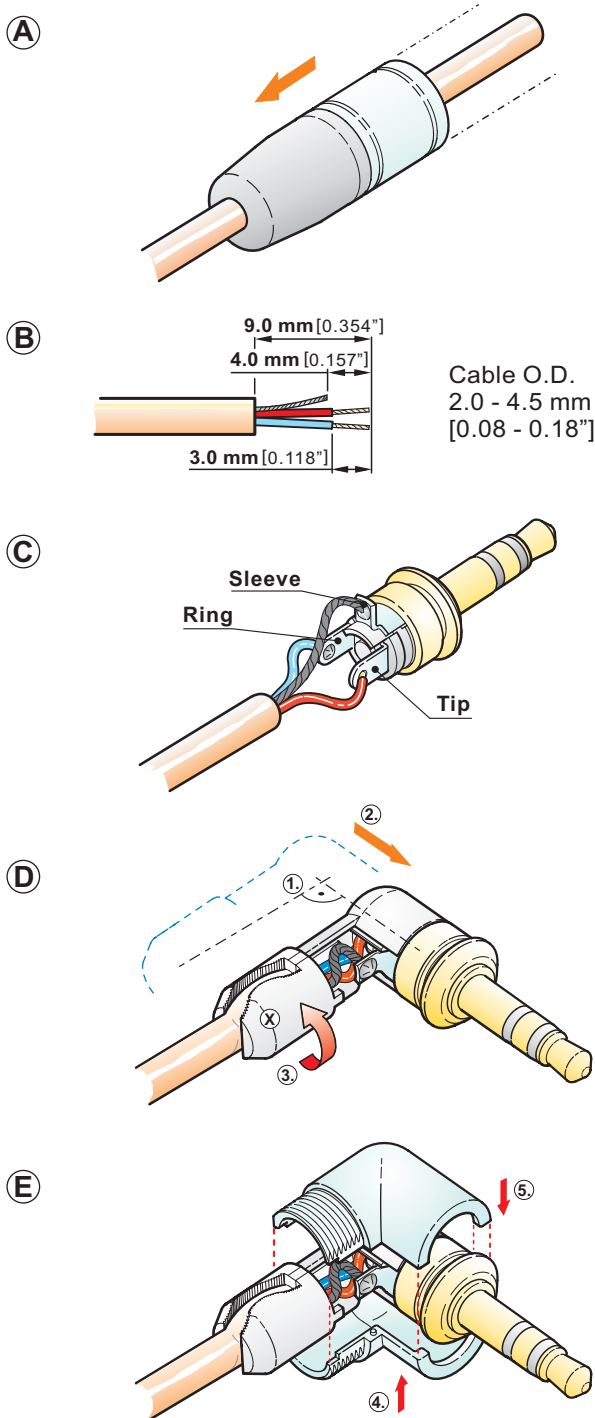

- A** Slide the boot onto the cable.
- B** Prepare cable as shown.
- C** Solder the wire ends .
- D** Assembly of strain relief:
  - ① Bend cable by 90° towards the sleeve contact.
  - ② Position the chuck on the connector body.
  - ③ Close the strain relief (break away part **X** if cable O.D. > 3.2 mm)
- E** Place the shell halves onto the connector body.
- F** Slide the bushing up to the thread and tighten it.

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93  
 NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704 / 438 9202  
 NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439  
 NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131 / 280 830

NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511  
 NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796  
 NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 128 / 3102M1241 | Update: 11.01.2013 | Data subject to change without prior notice. ©2013 NEUTRIK®. ALL RIGHTS RESERVED. NEUTRIK® are registered trademark.