



ASSEMBLY INSTRUCTION

NC3FX-TOP & NC5FX-TOP | XLR Cable Connector



IP65 RATED AND TOP-APPROVED.



MOUNTING VERSIONS

1 & **3** STANDARD ASSEMBLY OF XLR CONNECTOR

2 & **3** WITH ASSESSORIES:
CABLE & BOOT ASSEMBLY WITH INSERTION TOOL.
ITX-TOP: Cable insertion tool to guide the cable into the boot.



1 STANDARD CABLE ASSEMBLY




A Cut cable end approx. 45°.




B Slide the bushing over the cable.

To ease the boot assembly apply some cable pulling lubricant to the cable ends.

2 CABLE & BOOT ASSEMBLY WITH INSERTION TOOL

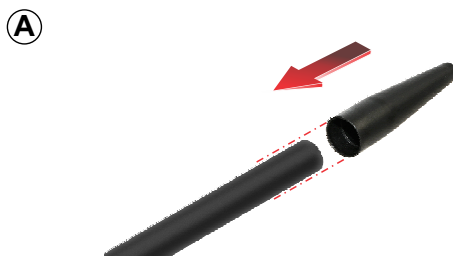



A Position the Insertion Tool onto the cable.

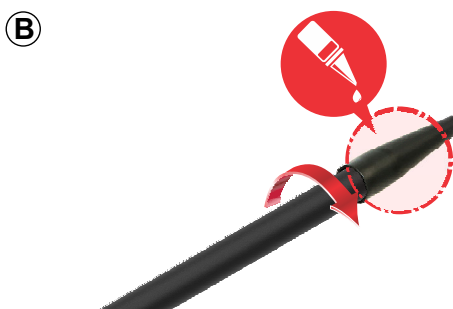



B Wet the tip with mounting fluid.

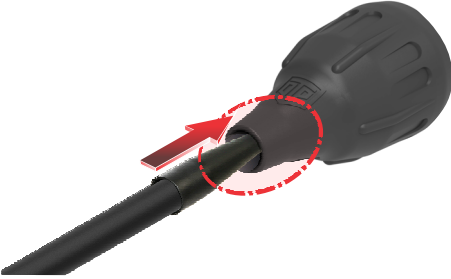


- C** 
- C** Slide the cable with the tool through the boot.
- D** 
- D** Remove the tool.

3 ASSEMBLY INSERT AND CONNECTOR

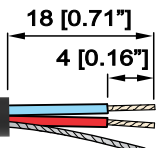- A** Cable O.D.: 5.0 - 8.0 mm [0.19 - 0.32"]
- 

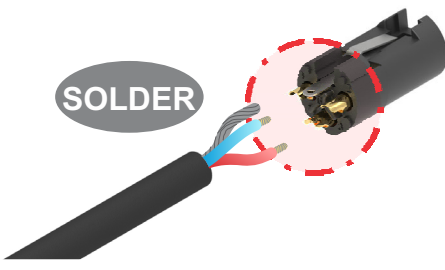- B** 

- A** Prepare cable as shown.
- B** Insert wires into the terminals and SOLDER them.

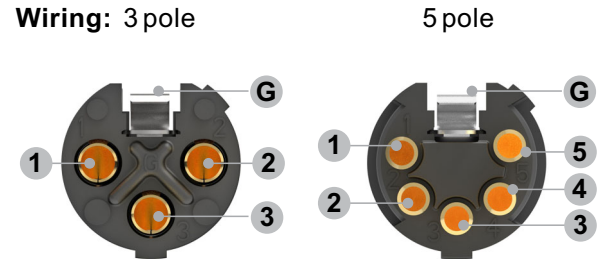

- C** 

- C** Put chuck onto the cable.
- Attention: Pay attention to the guiding key.**

- D** 

- D** Slide insert and chuck together into the housing.
- Important: Align the insert by positioning as shown.**



E



E Finish the installation by turning the bushing onto the connector.

Attention:

Screw the bushing to the end of the thread.



FINISHED XLR TOP



FINISHED XLR CONNECTOR



More Information on the website

Find more XLT TOP details on www.neutrik.com.



ITX-TOP TOOL:
Find more details on www.neutrik.com/product/itx-top



Draft. Nr.: BDA 549 V3
Update: 2023-03-21

Neutrik AG | LI-9494 Schaan

www.neutrik.com

Data subject to change without prior notice. © 2023 NEUTRIK®. NEUTRIK® are registered trademark of Neutrik AG. ALL RIGHTS RESERVED.